

IVECO CATALOGUE **2020**



IVECO

INDEX

COMPRESSORS	PAGE 4-5
AIR DRIERS	PAGE 6
MULTI/ PROTECTION VALES	PAGE 7
MASTER CYLINDERS	PAGE 8-9
CLUTCH SERVOS	PAGE 10-11
BOOSTERS	PAGE 12
FOOTVALES	PAGE 13
HAND CONTROLS	PAGE 14
TRAILER CONTROLS	PAGE 15
LOAD SENSING VALVES	PAGE 16-17
RELAY VALVES	PAGE 18
AIRBAGS & CABIN AIRBAGS	PAGE 19

COMPRESSORS

	BEYOND BRAKING	WABCO / OE / KNORR /IVECO
	CN3994 92mm EUROGARGO 120E EUROGARGO 130E EUROGARGO 140E EUROGARGO 150E EUROGARGO 160E EUROGARGO 180E EUROGARGO 225E EUROGARGO 230E EUROGARGO 75E18 EUROGARGO 80E21	LK3994 504016818 4897301 SEB01842000 Z0950022 ZEP0001655
	CN412/1 STRALIS TRAKKER EUROTECK EUROSTAR	412 352 008 0 412 352 020 0 4121 1219 4121 1220 504308489 Z0960025 ZEP0001649
	CN4936 IVECO STRALIS 260S48 440S42 440S43 440S45 440S50	LK4936 99471918 4121121 41211339 K022249N00 Z0950022 ZEP0001635

COMPRESSORS

	BEYOND BRAKING	WABCO / OE / KNORR /IVECO
	CN4936B IVECO STRALIS 440AS	LK4936 K022263N00 LK4969 K031813N00 504293730 5801216167 BUTTERFLY HEAD ZEP0001636
	CN418 160.26 180.26 190.30 260.30	ACX67 K007564 4802597 99440235 Z0940082 ZEP0001647
	CN3840 IVECO STRALIS 260S48 440S42 440S43 440S45 440S50	LK3840 K002141000 504080656 4897300 SEB01605 Z0940034

AIR DRIER'S

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	AF8125	LA8125
	AF8606	LA8606
	AF4734	LA8606/AE4560



MULTI / PROTECTION VALVE'S

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	AF4527	AE4527 4253 6820 K040608
	AF4502	AE4502 4253 5024 K048307
	AF4560	AF4560

MASTER CYLINDERS

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	MC572 STRALIS EUROTECH STAR	KG23017.1.1 4206 3311 S5461 23.81mm
	MC573	KN2892A1 KN3406E66 0247 9783 4032 1600 S6173 24.00mm
	MC575	KN25020B1 4203 7645 S6167 25.40mm

MASTER CYLINDER'S

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	MC577 STRALIS EUROTECH STAR	KG3107.0.1 4121 1005 S5728 31.75mm
	MC606	503127784



CLUTCH SERVO'S

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	CS204	970 051 114 0 659807 1261885 4032 0200 501202572 4200160000 Z0820004 80.50mm 67mm STROKE
	CS265	970 051 438 0 1519286 5010452511 504103066 Z0820059 100.00mm 22.5mm STROKE
	CS280	VG3269 II36379 4103 5502 Z0810015 100.00mm 77.50mm STROKE


CLUTCH SERVO'S

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	K013727N50 Kits available	K013727N50 42536490 42560762 2 WIRE ELECTERONIC CLUTCH SERVO 02.06.004
	K015875N50 Kits available	K015875N50 1 WIRE ELECTERONIC CLUTCH SERVO



BOOSTERS

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	AF12/16WB 16/12 WEDGE BOOSTER TUBE 165mm	
	AF9/16WB 9/16 WEDGE BOOSTER	



FOOT VALVES

	BEYOND BRAKING	WABCO / OE KNORR / IVECO
	VAF461315	461 315 008 0 4203 3847 4203 3849




HAND CONTROL VALVE'S

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	AFDPM95	DPM95AAX 98405732 500303741
	VAF961701 3 PORT ROTARY	961 701 100 0 961 701 110 0 0137 3808 0246 8535 0249 8634 0251 5048


TRAILER CONTROL VALVE'S

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	VAFTC5210 REPLACES 973 002 539 0	973 002 521 0 001 431 8705 002 431 0105 003 431 0205
	WAB-4802040020	EBS TRAILER CONTROL 480 204 002 0 REPLACES 480 204 001 0




LOAD SENSING VALVE'S

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	AF1295	SV1295
	AF1395	SV1395
	AFWLS	475 710 008 0



LOAD SENSING VALVE'S

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	AF0240	475 711 024 0

RELAY VALVE'S

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	VAFSQ16	M16 PORTS SQUARE RELAY VALVE
	VAFQR22	M22 QUICK RELEASE VALVE
	VAFSQ22	M22 SQUARE RELAY VALVE

CABIN AIR BAGS

	BEYOND BRAKING	WABCO / OE KNORR/ IVECO
	BB415110133 STRALIS FRONT	500357351 415110133 834041-K 139922.110
	BB415110134 STRALIS REAR	500357352 415110134 834045-K 139926.110



www.beyondbraking.co.za



AIR BRAKE COMPRESSOR INFO

Some oil carryover from the air compressor into the air brake system occurs as a normal part of all air compressor operation. Compressors require oil carry over to lubricate the compressors valves and rings. It is typical to find some presence of oil at the inlet and discharge ports of the air compressor. Oil present at the exhaust of unloader valves and air dryers is normal and indicates that these components are functioning properly, removing contaminants from the system. Vehicles equipped with desiccant type air dryer that incorporates a filter (separator) for removing oil from the air will normally minimise oil passed through to the reservoir. The oil collects in the air dryer with condensed moisture and is periodically purged. Often, the routing or location of the air dryer exhaust port can amplify concerns about oil passing, depending on where the purged oil or water mixture is expelled on the vehicle e.g. on a fender or onto a fuel tank. This can mistakenly be identified as "problem" oil passing, when the air dryer and compressor are functioning properly.



Johannesburg	071 360 5864
Johannesburg	071 360 5774
Johannesburg	071 360 5812
Vereeniging	071 360 7639
Durban	082 453 4814